

# CLP-380 Installation Procedure

**Caution:** Do not turn off the power or remove the USB flash memory during this operation.

## 1 Downloading the upgrade data

- 1) Download the Zip file.
- 2) Extract the six files included in the Zip file.
- 3) Insert the USB flash memory into your computer.
- 4) Copy the extracted files into the root directory of the USB flash memory.

## 2 Connecting the USB flash memory

Insert the USB flash memory containing the appropriate upgrade data to the USB TO DEVICE terminal on the instrument.



**Caution:**

- Make sure that the USB flash memory is connected properly to the selected terminal 'A' or 'B'.
- Do not try to force an incorrect connection; doing so may damage the terminal.

## 3 Installing the upgrade data

Simultaneously hold down the [PLAY/PAUSE] button on the panel and turn on the power. Keep holding down the [PLAY/PAUSE] button until the following display is shown.



```
Installer ver.1.00  
(C)2008 Yamaha Corp.
```

After a few moments, the following display appears.

```
[PLAY]: Install  
[STOP]: Delete Data
```

Press the [START] button to start installation.

⇒Go on to step 4. (Executing the installation)

Press the [STOP] button to delete the upgrade data.

⇒Go on to step 5. (Deleting the upgrade data)

## 4 Executing the installation

Press [PLAY/PAUSE] button to start the installation.

The progress ( 1~100%) of the installation will be displayed during the installation.

```
[PLAY]: Install ver.1.00  
[STOP]: Cancel
```



```
Now installing...  
■■■■■■■■■■ 30%
```

When the installation is completed, the following display appears.

```
Completed.  
Program version is 1.00.
```

Turn off the power switch on the instrument.

## 5

### Deleting the upgrade data

Press the [PLAY/PAUSE] button to call up the following display to start deleting the upgraded data.



When the deletion of the upgrade data is completed, the following display appears.

Completed.

### Confirming the version number

- 1) Turn on the power of the instrument.
- 2) Press [FUNCTION] button.
- 3) Use A [ - ] button to show 'Version Program'.

### Troubleshooting

- ☆ The power supply was cut off or the USB flash memory was removed during operation.
  - A complete reinstall is necessary. Perform the operation again from the beginning.
- ☆ "InS" is blinking when the power is turn on.
  - The USB flash memory is not inserted.
- ☆ Error number (E.xx) appears and the installation cannot be executed.

Check the following:

  - ✓ Is the USB flash memory inserted correctly?
  - ✓ Is the USB connector free from dust or dirt?
  - ✓ Is the USB flash memory or the upgrade data itself damaged in some way?

Try installing it again by using another USB flash memory.