



RECORDER

**POCKETRAK**

**PR7**

Owner's Manual  
Bedienungsanleitung  
Mode d'emploi  
Manual de instrucciones  
Manuale di istruzioni  
Руководство пользователя  
使用说明书  
取扱説明書

EN  
DE  
FR  
ES  
IT  
RU  
ZH  
JA

ENGLISH

DEUTSCH

FRANÇAIS

ESPAÑOL

ITALIANO

РУССКИЙ

中文

日本語

# FCC INFORMATION (U.S.A.)

## 1. IMPORTANT NOTICE: DO NOT MODIFY THIS UNIT!

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by Yamaha may void your authority, granted by the FCC, to use the product.

## 2. IMPORTANT:

When connecting this product to accessories and/or another product use only high quality shielded cables. Cable/s supplied with this product MUST be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.

## 3. NOTE:

This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices. This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the users manual, may cause interference harmful to the operation of other electronic

devices. Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures:

Relocate either this product or the device that is being affected by the interference.

Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter/s.

In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to co-axial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact Yamaha Corporation of America, Electronic Service Division, 6600 Orangethorpe Ave, Buena Park, CA90620

The above statements apply ONLY to those products distributed by Yamaha Corporation of America or its subsidiaries.

\* This applies only to products distributed by YAMAHA CORPORATION OF AMERICA.

(class B)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## CAN ICES-3(B)/NMB-3(B)

- This applies only to products distributed by Yamaha Canada Music Ltd.
- Ceci ne s'applique qu'aux produits distribués par Yamaha Canada Musique Ltée.

(class B)

## Entsorgung leerer Batterien (nur innerhalb Deutschlands)

Leisten Sie einen Beitrag zum Umweltschutz. Verbrauchte Batterien oder Akkumulatoren dürfen nicht in den Hausmüll. Sie können bei einer Sammelstelle für Altbatterien bzw. Sondermüll abgegeben werden. Informieren Sie sich bei Ihrer Kommune.

(battery)

## COMPLIANCE INFORMATION STATEMENT (DECLARATION OF CONFORMITY PROCEDURE)

Responsible Party : Yamaha Corporation of America  
Address : 6600 Orangethorpe Ave., Buena Park, Calif. 90620  
Telephone : 714-522-9011  
Type of Equipment : RECORDER  
Model Name : POCKETRAK PR7

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received including interference that may cause undesired operation.

See user manual instructions if interference to radio reception is suspected.

\* This applies only to products distributed by YAMAHA CORPORATION OF AMERICA.

(FCC DoC)

### IMPORTANT

Please record the serial number of this unit in the space below.

**Model**

---

**Serial No.**

---

The serial number is located inside the battery compartment of the unit.  
Retain this Owner's Manual in a safe place for future reference.

\* This applies only to products distributed by YAMAHA CORPORATION OF AMERICA.

(Ser.No)

이 기기는 가정용(B급) 전자파적합기기로서 주로  
가정에서 사용하는 것을 목적으로 하며, 모든  
지역에서 사용할 수 있습니다.

(class b korea)

### About MP3




- Supply of this product does not convey a license nor imply any right to distribute content created with this product in revenue-generating broadcast systems (terrestrial, satellite, cable and/or other distribution channels), streaming applications (via Internet, intranets and/or other networks), other content distribution systems (pay-audio or audio-on-demand applications and the like) or on physical media (compact discs, digital versatile discs, semiconductor chips, hard drives, memory cards and the like). An independent license for such use is required. For details, please visit <http://mp3licensing.com>.
- MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.



# PRECAUTIONS

## PLEASE READ CAREFULLY BEFORE PROCEEDING

\* Please keep this manual in a safe place for future reference.

 <b>DANGER</b>	Make sure to always observe the basic precautions listed below to prevent the likelihood of serious injury or even death from electrical shock, short-circuiting, damage, fire or other hazards.
 <b>WARNING</b>	Always follow the basic precautions listed below to avoid the possibility of serious injury or even death from electrical shock, short-circuiting, damages, fire or other hazards.
 <b>CAUTION</b>	Always follow the basic precautions listed below to avoid the possibility of physical injury to you or others, or damage to the device or other property.

These precautions include, but are not limited to, the following:

## About the Device

### **DANGER**

#### **Handling caution**

- Do not operate the device or use headphones/earphones while driving a car or riding a motorcycle or a bicycle, since this could result in a serious accident.

### **WARNING**

#### **Do not open**

- Do not open the device or attempt to disassemble the internal parts or modify them in any way. The device contains no user-serviceable parts. If it should appear to be malfunctioning, discontinue use immediately and have it inspected by qualified Yamaha service personnel.

#### **Water warning**

- Do not expose the device to rain, use it near water or in damp or wet conditions, or place containers near it containing liquids which might spill into any openings. If any liquid such as water seeps into the device, turn off the power immediately and unplug the power cord from the AC outlet. Then have the device inspected by qualified Yamaha service personnel.

#### **If you notice any abnormality**

- If this device should be dropped or damaged, immediately turn off the power and have the device inspected by qualified Yamaha service personnel.

### **CAUTION**

#### **Location**

- Do not expose the device to excessive dust or vibrations, or extreme cold or heat (such as in direct sunlight, near a heater, or in a car during the day) to prevent the possibility of panel discoloration or damage to the internal components.
- Do not place the device in an unstable position where it might accidentally fall over.

#### **Handling caution**

- Do not use the device or headphones/earphones for a long period of time at a high or uncomfortable volume level, since this can cause permanent hearing loss. If you experience any hearing loss or ringing in the ears, consult a physician.
- Do not rest your weight on the device or place heavy objects on it, and avoid use excessive force on the buttons, switches or connectors.

## About the Battery



### DANGER

- **If you notice battery leakage, discoloration, deformation, or any strange smell, immediately remove the battery from the device and stop operating, and also keep away from fire.**

If you continue operating the device, it could cause battery fire, explosion, electrolyte blowout, or smoke. If a leaking battery is close to a source of flame, the battery electrolyte could catch fire, resulting in battery fire, explosion, electrolyte blowout, or smoke.



### WARNING

- **Do not leave the battery installed for an extended time.** If the battery runs out, or if the device is not to be used for a long time (about one week), remove the battery from the device and keep it in a dry and cool place to prevent possible leakage of the battery fluid.
- **Do not deform, disassemble, or modify the battery.** Any modifications such as deformation, disassembly, or soldering directly to the battery terminals may cause ignition, explosion, and leakage or ejection of the electrolyte.
- **Do not allow a wire to connect the positive and negative terminals, and do not carry or store the battery together with metallic objects such as necklaces or hairpins.**

Doing so may short-circuit the battery, causing excessive current to flow, and possibly resulting in ignition, explosion, and leakage or ejection of the electrolyte. This may also cause the wire or necklace to heat up.

- **Do not throw the battery into a fire, heat it, or expose it to the sunlight for a long time.**
  - **Do not peel off or damage the external covering.**
- Peeling off the external covering, piercing it with a nail or sharp object, striking it with a hammer, or stepping on it may cause a short-circuit within the battery, causing ignition, explosion, leakage or ejection of the electrolyte, or overheating.
- **Insert the battery as instructed.**
- Always make sure the battery is inserted in conformity with the +/- polarity markings. Failure to do so might cause abnormal electric current flow in the battery, resulting in fire, explosion, leakage or ejection of the electrolyte, or overheating in use.

- **Be sure to use the specified battery.**  
Do not replace the battery with any battery other than the one specified (the same type or equivalent). Otherwise, the battery may ignite or explode, the battery liquid may spout or leak, or the unit may heat up.
- **Do not leave the battery within reach of children.**  
A child may swallow the battery accidentally. Also, leaking battery liquid may cause chemical reaction or inflammation. If a child swallows the battery accidentally, consult a doctor immediately.
- **An exhausted battery should be immediately removed from the device.**  
If an exhausted battery is left connected to the device for an extended period of time, gas generated by the battery may cause the battery to leak, overheat, burst, or damage this device.
- **When storing or discarding batteries, insulate the terminal area by applying tape, or some other protection.**  
Mixing them with other batteries or metal objects can cause electrolyte leakage, overheating, or battery fluid leakage.

### NOTICE

To avoid the possibility of malfunction/ damage to the product, damage to data, or damage to other property, follow the notices below.

#### Handling and Maintenance

- Do not use the device in the vicinity of a TV, radio, stereo equipment, mobile phone, or other electric devices. Otherwise, the device, TV, or radio may generate noise.
- Do not expose the device to excessive dust or vibration, or extreme cold or heat (such as in direct sunlight, near a heater, or in a car during the day), in order to prevent the possibility of panel discoloration, unstable operation, or damage to the internal components.
- Do not place vinyl, plastic or rubber objects on the device, since this might discolor the panel.
- When cleaning the device, use a dry and soft cloth. Do not use paint thinners, solvents, cleaning fluids, or chemical-impregnated wiping cloths.
- Condensation can occur in the device due to rapid, drastic changes in ambient temperature—when the device is moved from one location to another, or air conditioning is turned on or off, for example. Using the device while condensation is present can cause damage. If there is reason to believe that condensation might have occurred, leave the device for several hours without turning on the power until the condensation has completely dried out.
- Always turn the power off when the device is not in use.

#### Saving data

Saved data may be lost due to malfunction or incorrect operation. To protect against data loss, we recommended that you save important data to an external device such as a computer.

### Before using the microSD card

- If you insert the microSD card in the wrong orientation or upside down, the microSD card and/or the card slot may be damaged.
- If the recorder does not recognize the installed microSD card when the power to the unit is turned on, first turn off the power, remove the card, insert the card correctly, then turn the power on.
- Do not install or remove the microSD card while the power to the unit is on. Otherwise, the data on the microSD card may be damaged.
- Do not touch the terminal on the microSD card or expose the card to water or dirt.
- Do not try to bend, fold or place a heavy object on the microSD card.
- Do not use or keep the microSD card in a location subject to static electricity or electric noise.
- Do not place the microSD card in the vicinity of corrosive chemicals or corrosive gas. Otherwise, the card may malfunction or data on the card may be lost.
- Never place the microSD card within reach of small children. A child may swallow the card accidentally.
- If you discard the microSD card without precautions, important or personal data that remains on the card may become accessible to unauthorized individuals. To avoid this risk, erase all data on the card, destroy the card physically, then discard it.

### Information

#### About copyrights

- Copying of the commercially available musical data including but not limited to MIDI data and/or audio data is strictly prohibited except for your personal use.

#### About this manual

- The illustrations and LCD screens as shown in this manual are for instructional purposes only, and may appear somewhat different from those on your device.
- Windows is a registered trademark of Microsoft(R) Corporation in the United States and other countries.
- Apple, Mac and Macintosh are trademarks of Apple Inc., registered in the U.S. and other countries.
- The microSD and microSDHC logos are trademarks.



- The company names and product names in this manual are the trademarks or registered trademarks of their respective companies.

### Information for Users on Collection and Disposal of Old Equipment and used Batteries



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC.



Cd

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

#### [For business users in the European Union]

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

#### [Information on Disposal in other Countries outside the European Union]

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

#### Note for the battery symbol (bottom two symbol examples):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

Based on EN 50332-2:2003

Maximum output voltage (earphone output): ≤150mV

## Table of contents

Introduction .....	7
Accessories .....	7
Downloading software .....	8
About Manuals .....	8
Part names and functions .....	9
Inserting a battery and a microSD card (sold separately) .....	10
Power on/off .....	10
Setting the date and time .....	10
Understanding the information on the LCD screen .....	11
HOME screen .....	11
Disabling all control buttons .....	11
Recording/Playback .....	12
Changing the recording format (sound quality) .....	13
Specifying the recording destination .....	14
Reducing noise .....	16
Selecting a recording preset .....	17
Overdubbing (Layered recordings) .....	17
Adding or deleting a marker .....	18
Repeat playback .....	18
Adjusting the playback speed .....	19
Tuner .....	19
Metronome .....	20
Deleting a file .....	21
Dividing a file .....	22
Copying a file .....	22
Moving a file .....	23
File naming rules for dividing, deleting or moving a file .....	24
Connecting the PR7 to a computer .....	24
System settings .....	25
Troubleshooting .....	27
Error messages .....	28
Main specifications .....	29

## Introduction

Thank you for purchasing the Yamaha  
POCKETRAK PR7 recorder.

The PR7 is well-suited for numerous musical  
applications.

The PR7 boasts user-friendly operation of  
useful functions, such as overdubbing,  
repeat playback and playback speed adjust-  
ment, as well as normal recording and play-  
back, of course.

To take the best advantage of the PR7's out-  
standing features for the longest period of  
time, please read this Owner's Manual before  
you start using the PR7.

After reading this manual, please keep it for  
future reference.

## Accessories

- AAA-size alkaline battery x1
- USB cable x1
- Owner's Manual (this book) x1
- Software download license code x1  
(listed on the back cover of this book)

## Downloading software

---

Your PR7 comes with an access code that enables you to download “WaveLab LE” wave editor software for editing audio files. Once you download and install such software on an Internet-connected computer, you will be able to edit audio data that was recorded on the PR7.

For more information on downloading this software, refer to the Yamaha Pro Audio website:

<http://www.yamahaproaudio.com/pr7/>

## About Manuals

---

### Owner’s Manual (this book)

The Owner’s Manual includes information primarily about basic operation.

### Reference Manual (saved in the PR7 built-in memory)

The Reference Manual includes detailed information about operation and parameter setup. This file is in PDF format for viewing a computer. Copy this file to your computer to read this manual using Adobe® Reader®. You can also use the convenient features of such electronic files that enable you to search for terminology or jump to a linked page.

Download the latest version of Adobe Reader from the following website:

<http://www.adobe.com/>

## Copying the Reference Manual

The Reference Manual is stored in the MANUAL folder in the built-in memory. Follow the steps below to copy the manual to your computer:

- 1. Use the supplied USB cable to connect the PR7 to your computer.**
- 2. After the PR7 is recognized as a USB device on the computer, double-click “PR7” to open the MANUAL folder.**  
The Reference Manual file is called “PR7\_RM\_EN.pdf”.
- 3. Drag and drop the file onto the desktop.**
- 4. Open the file in Adobe Reader.**

Refer to page 24 for more information on connecting the PR7 to a computer.


### NOTE

- If you deleted the MANUAL folder or the Reference Manual in the built-in memory by accident, format (initialize) the memory to automatically re-create the MANUAL folder.
- You can download the Reference Manual from the following Yamaha Pro Audio web site:  
<http://www.yamahaproaudio.com/pr7/>




## Part names and functions

- ① **Built-in microphones**
- ② **REC LED**
- ③ **LCD screen**
- ④ **[OVERDUB] button**
- ⑤ **[MARK] button**
- ⑥ **[MENU] button**  
(Press and hold down this button to display the Folder screen.)
- ⑦ **[●] (Record) button**
- ⑧ **[■] (Stop) button**  
(Power on/Power off by pressing and holding down this button)
- ⑨ **[REC LEVEL] button**
- ⑩ **[+]/[-] buttons**
- ⑪ **[<]/[>] buttons**
- ⑫ **[▶||] (Play) button**
- ⑬ **[REC SET] button**  
(Press and hold down this button to display the Preset screen.)
- ⑭ **PHONES jack**
- ⑮ **MIC/LINE IN (external input) jack**
- ⑯ **[HOLD] switch**
- ⑰ **USB terminal**
- ⑱ **Battery compartment**
- ⑲ **microSD card slot**
- ⑳ **Threaded socket for tripod**
- ㉑ **Speaker**

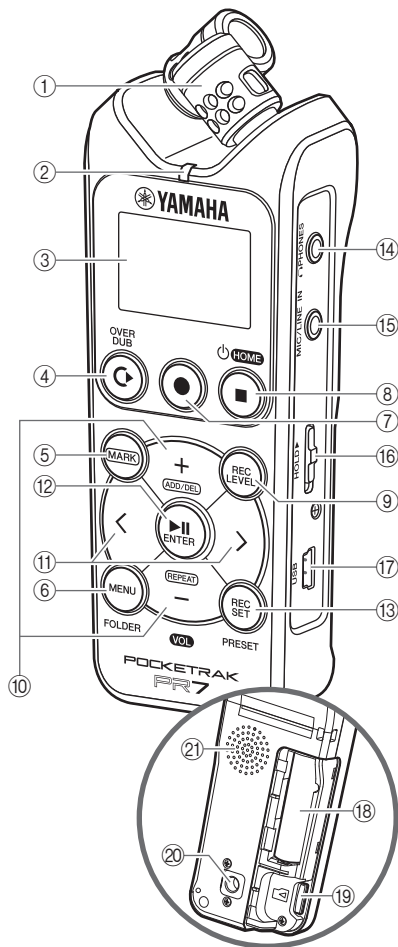


## Inserting a battery and a microSD card (sold separately)


1. Open the battery compartment cover.

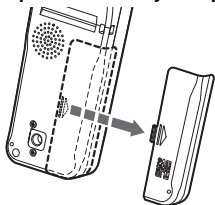

2. Insert a microSD card.

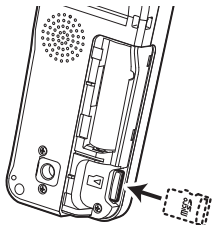

3. Insert a battery. (AAA alkaline battery cell or AAA NiMH battery x1)

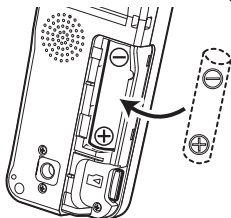

4. Close the cover.

## Power on/off

### Power on

Press the [■] (Stop) button.



### Power off

Press and hold down the [■] (Stop) button for at least 3 (three) seconds while the PR7 is stopped.



 
### NOTE

When no operation has been performed on the device for a certain length of time, the device turns off automatically.

## Setting the date and time

### Setting the calendar when you power on the unit for the first time

1. Use the [+] and [-] buttons to specify the year, then press the [▶||] (Play) button.



2. In the same way, specify the month, date, hour, and minute values.

To return to the previous parameter, press the [<] button.

To advance to the next parameter, press the [>] button.



3. After you complete the settings, press the [■] (Stop) button.




The PR7 displays the HOME screen.

#### NOTE

You can change this setting in the system setting menu. → page 25

## Understanding the information on the LCD screen

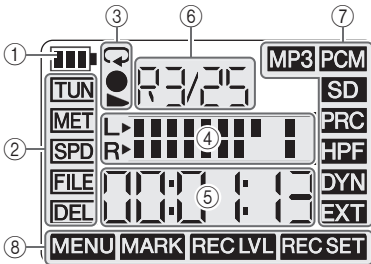


- ① Remaining battery power
- ② Menu items
- ③ Play/Record/Repeat indicators
- ④ Meter
- ⑤ Playback/Recording time, Remaining time
- ⑥ Folder/File number
- ⑦ Recording settings
- ⑧ Current mode

## HOME screen

You can select one of four possible HOME screens using the [■] (Stop) button.




### Option 1

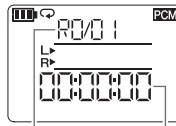

Folder/File number

Current position in the file


### Option 2

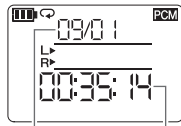

File date

File recording start time


### Option 3

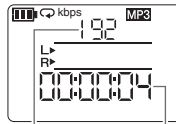

Recording format (sound quality)

Duration of the entire file

### Option 4

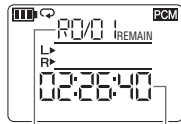


Folder/File number

Available recording time


## Disabling all control buttons

 Slide the [HOLD] switch upward.



#### NOTE

 - You can use the [HOLD] switch even during recording or playback.
- If you turn on the Hold function while the unit is stopped, it will display the date and time.



## Recording/Playback

### Recording

1. Press the [●] (REC) button.

The PR7 enters recording standby mode.




2. Press the [REC LEVEL] button.



3. Use the [+] and [-] buttons to adjust the recording level.

Make sure that the level meter is not “pinned” all the way to the right.

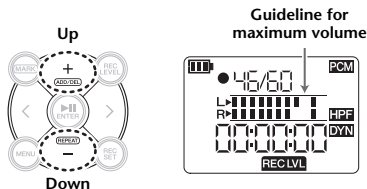

4. Press the [REC LEVEL] button again to call up the recording standby screen.



5. Press the [●] (REC) button again.
- Recording starts.



6. To stop, press the [■] (Stop) button.

The playback position will automatically return to the beginning of the recorded audio file.




### Playback

1. Press the [▶||] (Play) button.



2. Use the [+] and [-] buttons to adjust the playback level.

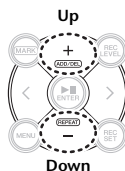

3. To stop, press the [■] (Stop) button.



### Other controls during playback

- **Fast forward/fast reverse**  
Press and hold down the [<] or [>] buttons during playback.
- **Pause**  
Press the [▶||] (Play) button during playback.

### Selecting a file

Selecting a file in the same folder

1. Use the [<] or [>] buttons while the PR7 is stopped or playing.



Moving a file from one folder to another  
→ page 14

 
Switching between the built-in memory and a microSD card  
→ page 14

## Changing the recording format (sound quality)


1. Press the [REC SET] button.




2. Use the [+] and [-] buttons to select "MP3 PCM" from the recording setting menu, then press the [▶||] (Play) button.



3. Use the [+] and [-] buttons to select "PCM" or "MP3" then press the [▶||] (Play) button.

 

4. Use the [+] and [-] buttons to specify the sound quality (format), then press the [▶||] (Play) button.

 

### NOTE

For PCM recording, you can specify the sampling frequency (kHz) and bit depth (bit).

Supported formats, sound quality, and data size

PCM (WAV)	kHz	96, 88.2, 48, 44.1 (indicated as 88) (indicated as 44)
	bit	24, 16
MP3	kbps	320, 192, 128, 64, 32
Sound quality	Better	←
Size	Larger	←

5. After the setting process is complete, press the [■] (Stop) button.



The PR7 calls up the HOME screen.

Estimated available recording time (with internal 2GB memory)

Recording mode		Available recording time (estimated)	
PCM (WAV)	24-bit	96kHz	Approx. 55 minutes
		88.2kHz	Approx. 1 hour
		48kHz	Approx. 1 hour 45 minutes
	16-bit	44.1kHz	Approx. 1 hour 55 minutes
		96kHz	Approx. 1 hour 20 minutes
		88.2kHz	Approx. 1 hour 25 minutes
MP3	48kHz	Approx. 2 hours 40 minutes	
	44.1kHz	Approx. 2 hours 55 minutes	
	320kbps	Approx. 12 hours 45 minutes	
	192kbps	Approx. 21 hours	
	128kbps	Approx. 32 hours	
	64kbps	Approx. 64 hours	
	32kbps	Approx. 127 hours	

\* If you record multiple files, the total available recording time will be shorter than those estimated above.

\* The largest available recording space (for continuous recording) per file is 2GB. If the recording file size reaches 2GB, the PR7 will automatically continue recording into a subsequent file (when using a microSDHC card). However, the unit will be unable to record continuously if the recording exhausts the battery (→ page 29).

\* To display the available recording time, press the [■] (Stop) button repeatedly while the HOME screen is displayed.

 
## Specifying the recording destination

### Switching between the built-in memory and a microSD card


1. Press the [REC SET] button.



2. Use the [+] and [-] buttons to select "SD" from the recording setting menu, then press the [▶||] (Play) button.



3. Use the [+] and [-] buttons to select "Int" (built-in memory) or "Sd" (microSD card), then press the [▶||] (Play) button.

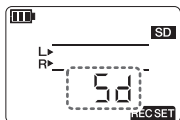

4. After the setting process is complete, press the [■] (Stop) button.  
The PR7 calls up the HOME screen.





### Selecting the recording destination folder


1. Press and hold down the [MENU] button for at least two seconds.



2. Use the [+] and [-] buttons to select "rEC" (REC/for recording only) or "MSC" (MUSIC/for playback only), then press the [▶||] (Play) button.

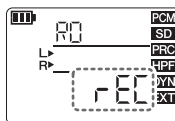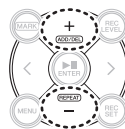

3. Use the [+] and [-] buttons to select a folder (R1, M1, etc.), then press the [▶||] (Play) button.

 


After the setting is confirmed, the PR7 automatically calls up the HOME screen.

## Folder structure

The folders in built-in memory are structured as follows:

The REC folder and MUSIC folder are automatically created on a microSD card when the card is inserted into the unit.

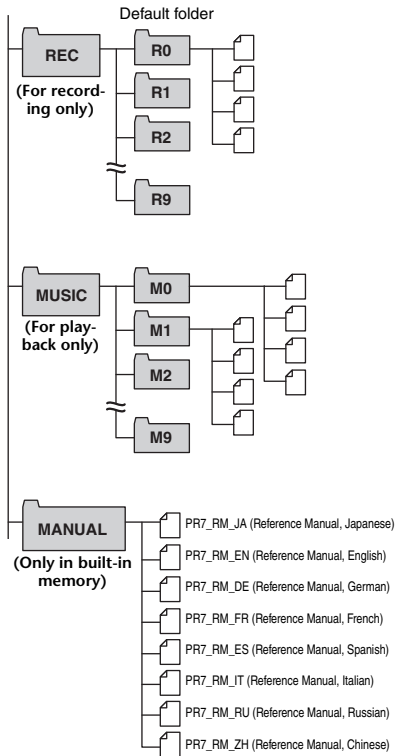

- **REC folder**

Stores audio files that were recorded on the unit.

- **MUSIC folder**

Stores files that were copied from a computer. PCM, MP3, and WMA files are supported for playback. This folder is used for playback only. You cannot copy or divide files in the MUSIC folder.

- **MANUAL folder**

Stores the Reference Manual. This folder is included only in built-in memory.

## About the limitations of files and folders

The size and the number of folders and files are limited.

- **The number of files per folder: Up to 99 files**

As soon as you start recording the 100th file, an error message (page 28) will be displayed and you will be unable to record.

- **Maximum file size: 2GB**

If recording is extended and its size exceeds 2GB, the PR7 will create a new file and continue recording in two seconds.

### NOTE

If you plan to record audio of lengthy duration, use a microSDHC card that can accommodate large files.

## About the file format

The PR7 supports only those file formats that are available as recording format options on the unit.

Recording format → page 13

## Reducing noise


### Preventing low-range noise (High-pass filter)

The high-pass filter reduces low-range ambient noises, such as footsteps or rumbling caused by the wind.


1. Press the [REC SET] button.



2. Use the [+] and [-] buttons to select "HPF" from the recording setting menu, then press the [▶||] (Play) button.

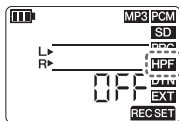

3. Use the [+] and [-] buttons to select "On" then press the [▶||] (Play) button.

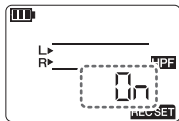

4. After the setting process is complete, press the [■] (Stop) button.



The PR7 calls up the HOME screen.



### Preventing excessive input level (Dynamics control)

This function prevents excessive input levels that could cause audio clipping or noise.


1. Press the [REC SET] button.



2. Use the [+] and [-] buttons to select "DYN" from the recording setting menu, then press the [▶||] (Play) button.

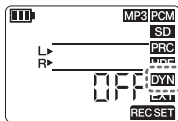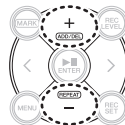

3. Use the [+] and [-] buttons to select "LIM" (Limiter), "ALC HI" (for soft sounds), or "ALC LO" (for loud sounds), then press the [▶||] (Play) button.

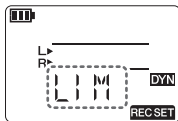

4. After the setting process is complete, press the [■] (Stop) button.




The PR7 calls up the HOME screen.



## Selecting a recording preset

The PR7 offers presets that feature predetermined parameter settings to optimize the recording source.

1. Press and hold down the [REC SET] button for at least two seconds while the PR7 is stopped.
2. Use the [+], [-], < and > buttons to select a preset that is suitable for the recording source, then press the [▶||] (Play) button.

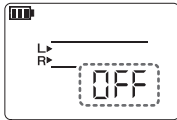



### Available presets

- OFF (musical instrument)
- bAnd (band)
- SPEECH (conference/speech)
- FIELd (field recording)
- nEAR (recording closer to the musical instrument/close miking)

## Overdubbing (Layered recordings)

You can layer a recording over an existing audio file and create a new file. This process is called “overdubbing.” Make sure to connect a set of headphones when doing this; overdubbing cannot be executed by using the built-in speaker.

1. Select a file that you want to use for overdubbing, then press the [OVERDUB] button.
2. Press the [REC LEVEL] button.
3. Press the [+] or [-] button to adjust the recording level. Press the [<] or [>] button to adjust the playback level.

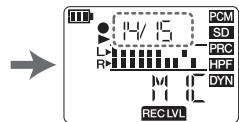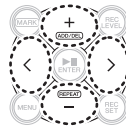OVER  
DUB

4. Press the [REC LEVEL] button again to display the previous screen.
5. Press the [●] (REC) button. Overdubbing starts.



6. After recording is complete and the PR7 plays the original file to the end, press the [■] (Stop) button.



The PR7 calls up the HOME screen.

### Other operations available during overdubbing

[▶||] (Play) button → Pause

[●] (REC) button → Dubbing

Punch in/out → Refer to the Reference Manual

## Adding or deleting a marker


You can insert a marker into the file to mark the playback position.

1. Press the [MARK] button.




2. While the PR7 is stopped, playing, or recording, press the [+] button at the location where you want to add a marker.

A numbered marker is added.

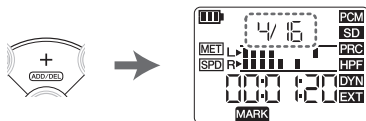

3. To delete a marker, press the [+] button at the position of the marker you want to delete.

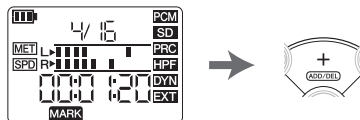

### NOTE

You can delete markers only while operation is stopped or playback is paused.  
 You can delete only the marker at the current location.  
 You can add up to 36 markers per file.  
 There should be two seconds or longer between markers.

## Repeat playback

You can repeatedly play back between adjacent markers.

1. Press the [MARK] button.




2. Insert markers at the start and end points of the portion you want to play repeatedly.



3. Press the [<] button to locate the start point of the Repeat playback portion.



4. While the PR7 is stopped or playing, press the [-] button to activate Repeat playback.

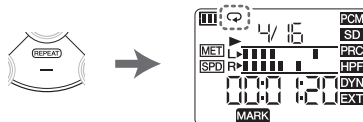

5. To cancel Repeat playback, press the [-] button again.



### NOTE

If an audio file does not include any markers, the PR7 will play the entire file repeatedly if you activate Repeat playback.


## Adjusting the playback speed

You can decrease or increase the playback speed, if necessary.


1. Press the [MENU] button.



2. Use the [+] and [-] buttons to select "SPD", then press the [▶||] (Play) button.

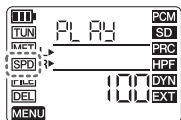

3. Use the [+] and [-] buttons to select the desired playback speed (expressed as a percentage), then press the [▶||] (Play) button.

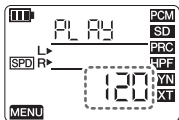

Setting range: 50%–200%

4. After the setting process is complete, press the [■] (Stop) button.



The PR7 calls up the HOME screen.

### NOTE

- Pressing the [MENU] button during playback enables you to change only the playback speed.
- PCM: With files recorded at sampling rates of 96kHz/88.2kHz, you can set the playback speed in the range of 50% to 150%.



## Tuner

You can use the tuner to tune your musical instrument.


1. Press the [MENU] button.



2. Use the [+] and [-] buttons to select "TUN", then press the [▶||] (Play) button.

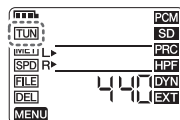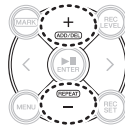


3. Use the [+] and [-] buttons to specify the standard pitch (A=), then press the [▶||] (Play) button.

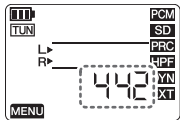

Setting range: 430–450Hz

4. Play and tune the musical instrument.

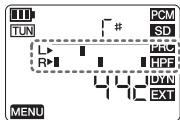

← Key

← Align with the center segment.

5. After tuning is complete, press the [■] (Stop) button.
- The PR7 calls up the HOME screen.



## Metronome

Make settings for the metronome used during recording.

You can also use the metronome in the metronome settings screen (Step 6).


### NOTE

During recording, the metronome sound is output only from the PHONES (headphone) jack.


1. Press the [MENU] button.




2. Use the [+] and [-] buttons to select "MET", then press the [▶||] (Play) button.

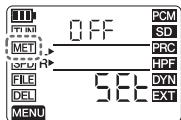


3. Press the [>] button to select On/OFF parameter, then press the [▶||] (Play) button.

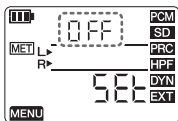


4. Use the [+] and [-] buttons to select "On", then press the [▶||] (Play) button.

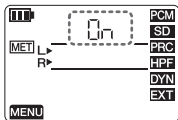

5. Press the [<] button to select "SET" then press the [▶||] (Play) button.

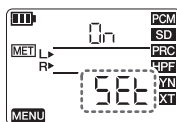


6. Use the [+] and [-] buttons to specify the tempo value, then press the [▶||] (Play) button.

 

Setting range: 30–250

7. Use the [+] and [-] buttons to specify the beat value, then press the [▶||] (Play) button.

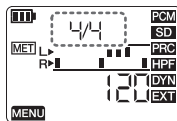

Setting range: 0/4–8/4

8. After the setting process is complete, press the [■] (Stop) button.



The PR7 calls up the HOME screen.

## Deleting a file

If the available memory space is getting small, or if the folders contain the maximum number of files, delete unnecessary files to increase the space.


1. Select a file that you want to delete, then press the [MENU] button.




2. Use the [+] and [-] buttons to select "DEL", then press the [▶||] (Play) button.



3. Press the [+] or [-] button to select a single file or all files in the folder, then press the [▶||] (Play) button.

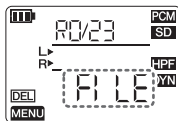

Delete only the currently selected file

 

Delete all files in the folder

4. Press the [<] button to select "y" (Yes), then press the [▶||] (Play) button.



5. After the setting is complete, press the [■] (Stop) button. The PR7 calls up the HOME screen.










### NOTE


 

- If you delete files, you will be unable to restore those files. Be sure to play the file and check its contents before you delete it.
- For important details on rules concerning file naming, see page 24.


## Dividing a file



You can divide the currently-selected file into two.

  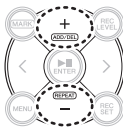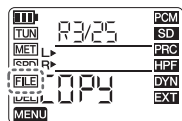
1. While playing back the file you wish to divide, press the  (Play) button to pause playback at the point where you want to divide the file, then press the  button.
2. Use the  and  buttons to select "FILE", then press the  (Play) button.



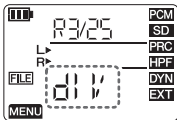 
3. Use the  and  buttons to select "div", then press the  (Play) button.







4. Press the  button to select "y" (Yes), then press the  (Play) button.







5. After the operation is complete, press the  (Stop) button. The PR7 calls up the HOME screen.


## Copying a file

 

You can copy files between the built-in memory and a microSD card.


1. Select a file to copy, then press the  button.
2. Use the  and  buttons to select "FILE", then press the  (Play) button.

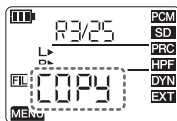

3. Use the  and  buttons to select "COPY", then press the  (Play) button.



4. Press the  button to select "y" (Yes), then press the  (Play) button.

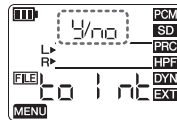

**NOTE**

- You can divide or copy a file as long as the file is in one of the folders within the REC folder.
- You can divide a file while playback is paused or operation is stopped. It can be convenient to first insert a marker at the point at which you want to divide the file (→ page 18).
- Files can be copied from a folder in the built-in memory into a folder with the same name on the microSD card, and vice versa. For example, a file in the R0 folder can be copied into the R0 folder on the microSD card.
- For important details on rules concerning file naming, see page 24.

 
**Moving a file**

You can move a file from one folder to another within the REC folder.


1. Select a file to move, then press the [MENU] button.




2. Use the [+] and [-] buttons to select "FILE", then press the [▶||] (Play) button.




3. Use the [+] and [-] buttons to select "trns" (transfer), then press the [▶||] (Play) button.

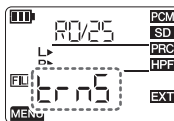

4. Use the [+] and [-] buttons to select the destination folder from the R0-R9 folders, then press the [▶||] (Play) button.

 

5. Press the [<] button to select "y" (Yes), then press the [▶||] (Play) button.

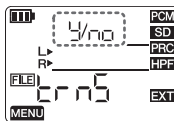

6. After the operation is complete, press the [■] (Stop) button.


The PR7 calls up the HOME screen.

**NOTE**

 
For important details on rules concerning file naming, see page 24.

## File naming rules for dividing, deleting or moving a file

- If file R0/01 is divided, the resultant files will be named (numbered) R0/01 and R0/02. The number of existing subsequent files will increase by one (1); for example, file number "R0/02" will become "R0/03."



 
- If file R0/01 is deleted, the number of each subsequent file (that exists in the R0 folder) will decrease by one (1); for example, file number "R0/02" will become "R0/01."



- If file R0/01 is copied, the copy will be assigned the lowest available file number in the copy destination folder (R0).




- If file R0/01 is moved into the R1 folder:
  - The number of each subsequent file (that exists in the R0 folder) will decrease by one (1); for example, file number "R0/02" will become "R0/01."
  - The file that you moved will be assigned the lowest available file number in the destination folder (R1).

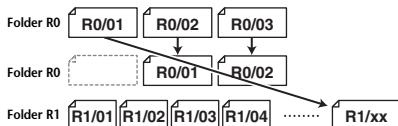

## Connecting the PR7 to a computer

- Use the supplied USB cable to connect the PR7 to your computer.

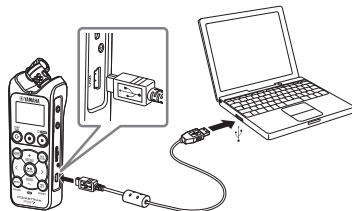


- After the PR7 is recognized as a USB storage device on the computer, double-click "PR7" (built-in memory) or "PR7SD" (microSD card) to open.

### Windows



### Mac

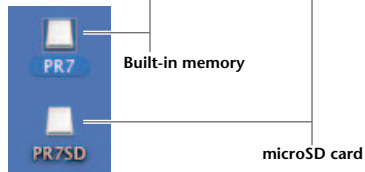


- To disconnect the PR7 from the computer, follow the steps to disconnect a USB storage device.



## System settings

Here you can make settings for the device itself.

1. With the power turned off, hold down [REC SET] and turn the power on.

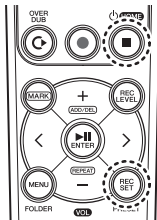

2: Power on  
(Press and hold down  
this button.)




1: While pressing and holding  
down this button

### NOTE


When the PR7 starts up, release the power button. If you continue holding it, the power will turn off.

2. Use the [+] and [-] buttons to select a system setting menu item.

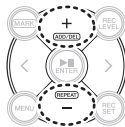

## Resetting the calendar


1. Use the [+] and [-] buttons to select "CAL" (calendar), then press the [▶||] (Play) button.

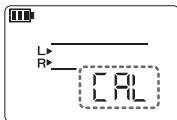


2. Make settings as described in the procedure on page 10.

## Resetting the menu

1. Use the [+] and [-] buttons to select "rESEt" (reset), then press the [▶||] (Play) button.

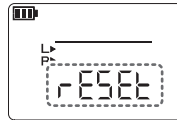

2. At the confirmation screen, use the [<] and [>] buttons to select "y" (Yes), then press the [▶||] (Play) button.

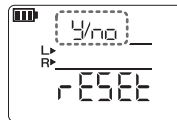

3. After the setting process is complete, press the [■] (Stop) button.

The PR7 calls up the HOME screen.



### NOTE


Data stored in the built-in memory and on a microSD card will not be initialized, nor will calendar settings be initialized.

## Formatting (Initializing) the built-in memory or a microSD card


### NOTE

We recommend that you format a microSD card on the PR7 before using the card for the first time.


1. Use the [+] and [-] buttons to select "ForMAT" (format), then press the [▶||] (Play) button.

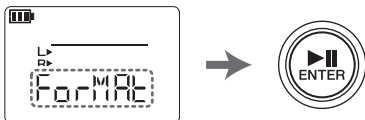

2. Use the [+] and [-] buttons to select "Int" (built-in memory) or "Sd" (microSD card), then press the [▶||] (Play) button.

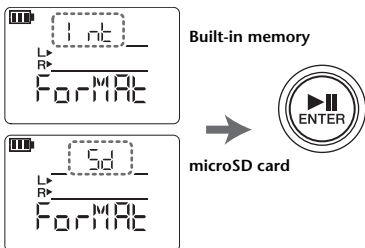

3. At the confirmation screen, use the [<] or [>] buttons to select "y" (Yes), then press the [▶||] (Play) button.

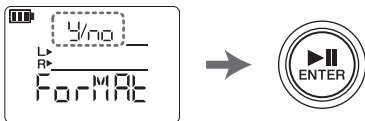

4. After the setting process is complete, press the [■] (Stop) button.  
The PR7 calls up the HOME screen.



## Switching the REC LED on or off

1. Use the [+] and [-] buttons to select "LEd" (LED), then press the [▶||] (Play) button.
2. Use the [+] and [-] buttons to select "On" or "Off," then press the [▶||] (Play) button.

## Tuner pitch indication

1. Use the [+] and [-] buttons to select "tUnEr" (tuner), then press the [▶||] (Play) button.
2. Use the [+] and [-] buttons to select "On" or "Off," then press the [▶||] (Play) button.

## Troubleshooting

### ■ The unit does not operate.

Check the remaining battery power  
→ page 10

### ■ Buttons or switches are not responsive.

Check the status of the [HOLD] switch.  
→ page 11

### ■ The unit does not recognize an inserted microSD card.

Make sure that a card is fully inserted.  
→ page 10

Make sure that the card uses a supported format.

→ Power on while pressing and holding down [REC SET] > use the [+] / [-] buttons to select "ForMAT" > "Sd" > "y" (Yes)

### ■ No audio is heard.

Adjust the volume → Use the [+] or [-] button.

### ■ Unable to record.

Make sure that you follow the proper recording procedure. → page 12

Adjust the recording level → page 12

#### Not enough memory space

Delete a file → page 21

### ■ Unable to play files in the REC folders.

Copy the files into the MUSIC folder.

→ "Connecting a computer to the PR7 and transferring a file" (Reference Manual)

### ■ Unable to play files in the MUSIC folders.

Check the file format. → page 29

Check to see to which folder you moved the file.

→ MUSIC folder

> One of the M0–M9 folders

Check the number of files in each folder.

→ Up to 99 files

### ■ Unable to divide a file.

Not enough memory space  
Delete a file → page 21

### ■ Unable to delete a file.

The file is read-only.

→ Connecting the PR7 to a computer  
page 24

Use the computer to cancel the read-only status.

### ■ Unable to copy a file.

Make sure that a microSD card is inserted.  
→ page 10

### ■ The computer does not recognize a connected PR7.

Check the connection. → page 24

Connect the PR7 directly to a USB port on the computer.

### ■ The recorded sound is distorted.

Reduce the low-range noise. → page 16  
Replace the battery. → page 10

### ■ The recorded sound clips.

Adjust the recording level. → page 12

Prevent excessive input levels. → page 16

### ■ The recorded sound skips.

Format a microSD card on the PR7.

→ Power on while pressing and holding down [REC SET] > use the [+] / [-] buttons to select "ForMAT" > "Sd" > "y" (Yes)

### ■ The date and time are displayed incorrectly.

Set the calendar. → page 10

### ■ A file you intend to overdub was not recorded all the way to the end.

Refer to the overdubbing section.

→ page 17

## Error messages

Unit status or function	Error Messages	Action
<b>Built-in memory error</b>	Int Error	Initialize the built-in memory. → Power on while pressing and holding down [REC SET] > "ForMAT" > "Int" > "y" (Yes) (Reference Manual "System setting menu.") → If the error persists after initialization, the unit may be malfunctioning.
<b>microSD card error</b>	Sd Error	Re-insert the card (page 10) or format the card. → Power on while pressing and holding down [REC SET] > "ForMAT" > "Sd" > "y" (Yes) (Reference Manual "System setting menu.") → If the error persists after formatting, the unit or the microSD card may be malfunctioning.
<b>Low battery</b>	Lo bAt	Replace the battery with a new one (page 10).
<b>No file</b>	no FILE	Select a folder that contains a file (page 13).
<b>No microSD card</b>	no SD	Insert a microSD card (page 10).
<b>File full</b>	FILE FULL	Select a folder that contains fewer than 99 files (page 13), or delete unnecessary files from the folder (page 21).
<b>Built-in memory full</b>	Int FULL	Delete unnecessary files from the built-in memory (page 21), copy files to a microSD card (page 22), or move files to a computer (page 24).
<b>microSD card full</b>	Sd FULL	Delete unnecessary files from the microSD card (page 21), or move files to a computer (page 24).
<b>Slow in recording into a microSD card</b>	REC Error	Select a recording format for lower sound quality (page 13) or re-format the microSD card. → Power on while pressing and holding down [REC SET] > "ForMAT" > "Sd" > "y" (Yes) (Reference Manual "System setting menu.") → If the error persists after re-formatting, the unit or the microSD card may be malfunctioning.
<b>File format error during overdubbing</b>	dUb Error	Select a file in a format that is supported for recording (page 13).
<b>File is too short. Dividing position error. The [FILE] button was pressed while the MUSIC folder was selected.</b>	Edit Error	Select a file that is longer than two seconds. Set the dividing position to anywhere in the middle. Avoid the start or end of the file (page 22). Select the REC folder (page 14).
<b>File deletion error</b>	dEL Error	From the connected computer, de-select "Read only" in the file's property panel, and cancel write-protection for the microSD card.
<b>Marker addition error</b>	Add Error	Position the marker away from the closest markers by two seconds or more (page 18).
<b>Recording level setting disabled error</b>	ALC On	Set the type of dynamics control to "OFF" or "LIM" (page 16).
<b>Excessive input level</b>	PEAK	Adjust the recording level (page 18) Dynamics control (page 16)

## Main specifications

<b>Supported Operating System</b>	Windows 8.1, 8, 7, Vista, XP Professional/Home Edition
	Mac OS X 10.4, 10.5, 10.6, 10.7, 10.8, 10.9
<b>Supported media</b>	microSD/SDHC card
<b>Supported recording format</b>	MP3 (32/64/128/192/320 kbps) PCM (WAV) (96/88.2/48/44.1 kHz, 24/16-bit)
<b>Playback format and supported bit rate</b>	MP3 (MPEG1 LAYER3, MPEG2 LAYER3): 16–320 kbps WMA: 32–192 kbps
	PCM: 96/88.2/48/44.1 kHz, 24/16-bit
<b>Sampling frequency</b>	16 kHz–96 kHz
<b>Jacks</b>	USB mini B; stereo headphones $\phi$ 3.5 mm mini; Stereo microphone (line input) $\phi$ 3.5 mm mini; microSD card slot
<b>Operating temperature</b>	+5°C – +35°C
<b>Power supply</b>	AAA alkaline battery cell or AAA NiMH battery x 1
<b>Battery life for recording</b>	Alkaline battery: MP3 64 kbps approx. 44 hours PCM 44.1 kHz 16-bit approx. 29 hours 30 minutes (Recording condition: REC LED off, no recording monitoring)
<b>Battery life for playback through headphones</b>	Alkaline battery: MP3 64 kbps approx. 30 hours PCM 44.1 kHz 16-bit approx. 22 hours 30 minutes
<b>Battery life for playback through speaker</b>	Alkaline battery: MP3 64 kbps approx. 24 hours 30 minutes PCM 44.1 kHz 16-bit approx. 18 hours
<b>Dimensions</b>	Approx. 46.6(W) x 132.1(H) x 28.7(D) mm
<b>Weight</b>	Approx. 82 g (including battery)
<b>Accessories</b>	USB cable; AAA alkaline battery; Owner's Manual (with the software download license code)

- \* Battery life varies depending on the type and manufacturer of the battery, storage conditions, usage, ambient temperature, etc. The battery life values listed above are estimates and are not guaranteed.
- \* NiMH battery life is estimated to be about 70% of that of an alkaline battery. Also, NiMH battery power voltage is different from that of an alkaline battery. Therefore, the remaining battery power may not be displayed correctly. Please note that you cannot recharge an NiMH battery using the PR7.
- \* Specifications and descriptions in this owner's manual are for information purposes only. Yamaha Corp. reserves the right to change or modify products or specifications at any time without prior notice. Since specifications, equipment or options may not be the same in every locale, please check with your Yamaha dealer.

# Important Notice: Guarantee Information for customers in European Economic Area (EEA) and Switzerland

<p><b>Important Notice: Guarantee Information for customers in EEA* and Switzerland</b></p> <p>For detailed guarantee information about this Yamaha product, and Pan-EEA* and Switzerland warranty service, please either visit the website address below (Printable file is available at our website) or contact the Yamaha representative office for your country. * EEA: European Economic Area</p>	<b>English</b>
<p><b>Wichtiger Hinweis: Garantie-Information für Kunden in der EWR* und der Schweiz</b></p> <p>Für nähere Garantie-Information über dieses Produkt von Yamaha, sowie über den Pan-EWR*- und Schweizer Garantieservice, besuchen Sie bitte entweder die folgend angegebene Internetadresse (eine druckfähige Version befindet sich auch auf unserer Webseite), oder wenden Sie sich an den für Ihr Land zuständigen Yamaha-Vertrieb, * EWR: Europäischer Wirtschaftsraum</p>	<b>Deutsch</b>
<p><b>Remarque importante: informations de garantie pour les clients de l'EEE et la Suisse</b></p> <p>Pour des informations plus détaillées sur la garantie de ce produit Yamaha et sur le service de garantie applicable dans l'ensemble de l'EEE ainsi qu'en Suisse, consultez notre site Web à l'adresse ci-dessous (le fichier imprimable est disponible sur notre site Web) ou contactez directement Yamaha dans votre pays de résidence. * EEE : Espace Economique Européen</p>	<b>Français</b>
<p><b>Belangrijke mededeling: Garantie-informatie voor klanten in de EER* en Zwitserland</b></p> <p>Voor gedetailleerde garantie-informatie over dit Yamaha-product en de garantieservice in heel de EER* en Zwitserland, gaat u naar de onderstaande website (u vind een afdrukbaar bestand op onze website) of neemt u contact op met de vertegenwoordiging van Yamaha in uw land. * EER: Europese Economische Ruimte</p>	<b>Nederlands</b>
<p><b>Aviso importante: información sobre la garantía para los clientes del EEE* y Suiza</b></p> <p>Para una información detallada sobre este producto Yamaha y sobre el soporte de garantía en la zona EEE* y Suiza, visite la dirección web que se incluye más abajo (la versión del archivo para imprimir está disponible en nuestro sitio web) o póngase en contacto con el representante de Yamaha en su país. * EEE: Espacio Económico Europeo</p>	<b>Español</b>
<p><b>Aviso importante: informazioni sulla garanzia per i clienti residenti nell'EEA* e in Svizzera</b></p> <p>Per informazioni dettagliate sulla garanzia relativa a questo prodotto Yamaha e l'assistenza in garanzia nei paesi EEA* e in Svizzera, potete consultare il sito Web all'indirizzo riportato di seguito (è disponibile il file in formato stampabile) oppure contattare l'ufficio di rappresentanza locale della Yamaha. * EEA: Area Economica Europea</p>	<b>Italiano</b>
<p><b>Aviso importante: informações sobre as garantias para clientes da AEE* e da Suíça</b></p> <p>Para obter uma informação pormenorizada sobre este produto da Yamaha e sobre o serviço de garantia na AEE* e na Suíça, visite o site a seguir (o arquivo para impressão está disponível no nosso site) ou entre em contato com o escritório de representação da Yamaha no seu país. * AEE: Área Económica Europeia</p>	<b>Português</b>
<p><b>Ἐπισημαντικὴ σημείωση: Πληροφορίες ἐγγύησης γιὰ τους πελάτες στὸν ΕΟΧ* καὶ τὴν Εὐαίτια</b></p> <p>Για λεπτομερείς πληροφορίες ἐγγύησης σχετικά με τὸ προϊόν τῆς Yamaha καὶ τὴν κάλυψη ἐγγύησης σε ὅλες τὶς χώρες τοῦ ΕΟΧ καὶ τὴν Εὐαίτια, ἐπισκεφτεῖτε τὴν ἴστοσελίδα τοῦ ιστοτόπου (Ἐκτύπωση μορφή) ἐνῆς διεύθυνσης στὴν ἴστοσελίδα μας ἢ ἐπικοινωνήστε τὴν ἀντιπροσωπεία τῆς Yamaha στὴ χώρα σας. * ΕΟΧ: Ευρωπαϊκός Οικονομικός Χώρος</p>	<b>Ελληνικό</b>
<p><b>Viktigt: Garantierinformation för kunder i EES-området* och Schweiz</b></p> <p>För detaljerad information om denna Yamaha-produkt samt garantierinformation i hela EES-området* och Schweiz kan du antingen besöka nedanstående webbadress (en utskriftsvänlig fil finns på webbplatsen) eller kontakta Yamahas officiella representant i ditt land. * EES: Europeiska Ekonomiska Samarbetsområdet</p>	<b>Svenska</b>
<p><b>Viktig merknad: Garantierinformasjon for kunder i EØS* og Sveits</b></p> <p>Detaljert garantierinformasjon om dette Yamaha-produktet og garantierfor service for hele EØS-området* og Sveits kan fås enten ved å besøke nettadressen nedenfor (utskriftsversjon finnes på våre nettsider) eller kontakte Yamahas kundetilgjeng i landet der du bor. *EØS: Det europeiske økonomiske samarbeidsområdet</p>	<b>Norsk</b>
<p><b>Vigtig oplysning: Garantioptlysninger til kunder i EØO* og Schweiz</b></p> <p>De kan finde detaljerede garantioptlysninger om dette Yamaha-produkt og den fælles garantierforordning for EØO* (og Schweiz) ved at besøge det websted, der er angivet nedenfor (der findes en fil, som kan udskrives, på vores websted), eller ved at kontakte Yamahas nationale repræsentationskontor i det land, hvor De bor. * EØO: Det Europæiske Økonomiske Område</p>	<b>Dansk</b>
<p><b>Tärkeä ilmoitus: Takuitiedot Euroopan talousalueen (ETA)* ja Sveitsin asiakkaille</b></p> <p>Tämän Yamaha-tuotteen sekä ETA-alueen ja Sveitsin takuuta koskevat yksityiskohtaiset tiedot saatte alla olevasta nettiosoitteesta, (Tulostettava tiedosto saatavissa sivustollamme.) Myös voitte ottaa yhteyttä paikalliseen Yamaha-edustajaan. *ETA: Euroopan talousalue</p>	<b>Suomi</b>
<p><b>Ważne: Warunki gwarancji i obowiązujące w EOG* i Szwajcarii</b></p> <p>Aby dowiedzieć się więcej na temat warunków gwarancyjnych tego produktu firmy Yamaha i serwisu gwarancyjnego w całym EOG* i Szwajcarii, należy odwiedzić wskazaną poniżej stronę internetową (Plik gotowy do wydruku znajduje się na naszej stronie internetowej) lub skontaktować się z przedstawicielstwem firmy Yamaha w swoim kraju. * EOG — Europejski Obszar Gospodarczy</p>	<b>Polski</b>
<p><b>Dôležité oznámenie: Zárúční informácie pro zákazníky v EHS* a ve Švajčiarsku</b></p> <p>Podrobné záručné informácie o tomto produkte Yamaha a záručných servisu v celom EHS* a ve Švajčiarsku naleznete na nižšie uvedenej webovej adrese (soubor k tisku je dostupný na našich webových stránkach) nebo se můžete obrátit na zástupce firmy Yamaha ve své zemi. * EHS: Evropský hospodářský prostor</p>	<b>Česky</b>
<p><b>Fontos figyelmeztetés: Garancia-információk az EGT* területén és Svájcban élő vásárlók számára</b></p> <p>A jelen Yamaha termékre vonatkozó részletes garancia-információk, valamint az EGT*-re és Svájcra kiterjedő garanciális szolgáltatás tekintetében keresse fel webhelyünket az alábbi címen (a webhelyen nyomatható fájlt is talál), vagy pedig lépjen kapcsolatba az országában működő Yamaha képviselővel íróddal. * EGT: Európai Gazdasági Térség</p>	<b>Magyar</b>
<p><b>Öäline märkus: Garantiteave Euroopa Majanduspiirkonna (EMP)* ja Sveitsi klientidele</b></p> <p>Täpsem teabe saamiseks selle Yamaha toote garanti ning kogu Euroopa Majanduspiirkonna ja Sveitsi garantiiteeninduse kohta, külastage palun veebisaiti alljärgneval aadressil (meie saitid on saadaval printitav fail) või pöörduge Teie regiooni Yamaha esinduse poole. * EMP: Euroopa Majanduspiirkond</p>	<b>Eesti keel</b>
<p><b>Svarīgās paziņojums: garantijas informācija klientiem EEZ* un Šveicē</b></p> <p>Lai saņemtu detaļētāku garantijas informāciju par šo Yamaha produktu, kā arī garantijas apkalpošanu EEZ* un Šveicē, lūdzam apmeklēt zemāk norādīto tīmekļa vietnes adresi (tīmekļa vietni ir pieejams drukājams fails) vai sazināties ar jūsu valsts apkalpojošo Yamaha pārstāvniecību. * EEZ: Eiropas Ekonomikas zona</p>	<b>Latviešu</b>

<p><b>Dėmesio: informacija dėl garantijos pirėjams EEE* ir Šveicarijoje</b></p> <p>Jei reikia išsamios informacijos apie šį „Yamaha“ produktą ir jo techninę priežiūrą visoje EEE* ir Šveicarijoje, apsilankykite mūsų svetainėje toliau nurodytu adresu (svetainėje yra spausdintinas failas) arba kreipkitės į „Yamaha“ atstovybę savo šaliai. *EEE – Europos ekonominė erdvė</p>	<p><b>Lietuvių kalba</b></p>
<p><b>Dėžėitė upozorzenie: Informacjo o zėruke pre zėkaznikov v EHP* a Švajėiarisku</b></p> <p>Podrobnė informacjo o zėruke tijkajuce sa tohto produktu od spolėnošti Yamaha a garanėnom servise v EHP* a Švajėiarisku najđete na webovej strėnke uvedenej niže (na našej webovej strėnke je k dispozicij sđbor na itak) alėbo sa obrėtne na zėstřpou spolėnošti Yamaha vo svojej krajine. * EHP: Eurđpsky hospodėrsky prestor</p>	<p><b>Slovenėina</b></p>
<p><b>Pomembno obavestio: Informacjo o garanciji za kupce v EGP* in Švici</b></p> <p>Za podrobnėje informacjo o tem Yamahinem izdelku ter garanciskem servisu v celotnem EGP in Švici, obiđite spletno mesto, ki je navedeno spodaj (natisljiva datoteka je na voljo na našem spletnem mestu), ali se obrnite na Yamahinega predstavnika v svoji drėžavi. * EGP: Evropski gospodarski prostor</p>	<p><b>Slovenėina</b></p>
<p><b>Важно съобщение: Информация за гаранцията за клиенти в ЕИП* и Швейцария</b></p> <p>За подробна информация за гаранцията за този продукт на Yamaha и гаранционното обслужване в паневропейската зона на ЕИП* и Швейцария или посетете посочения по-долу уеб сайт (на нашия уеб сайт има файл за печат), или се свържете с представителния офис на Yamaha във вашата страна. * ЕИП: Европейско икономическо пространство</p>	<p><b>Български език</b></p>
<p><b>Notificare importantă: Informații despre garanție pentru clienții din SEE* și Elveția</b></p> <p>Pentru informații detaliate privind acest produs Yamaha și serviciul de garanție Pan-SEE* și Elveția, vizitați site-ul la adresa de mai jos (fișierul imprimabil este disponibil pe site-ul nostru) sau contactați biroul reprezentanței Yamaha din țara dumneavoastră. * SEE: Spațiul Economic European</p>	<p><b>Limba română</b></p>

<http://europe.yamaha.com/warranty/>

URL\_4

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷线路板	×	○	○	○	○	○
<p>○：表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T 11363-2006标准规定的限量要求以下。</p> <p>×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006标准规定的限量要求。</p> <p>(此产品符合EU的RoHS指令。)</p> <p>(この製品はEUのRoHS指令には適合しています。)</p> <p>(This product conforms to the RoHS regulations in the EU.)</p> <p>(Dieses Produkt entspricht der RoHS-Richtlinie der EU.)</p> <p>(Ce produit est conforme aux réglementations RoHS de l'UE.)</p> <p>(Este producto cumple con los requisitos de la directiva RoHS en la UE.)</p>						



此标识适用于在中华人民共和国销售的电子信息产品。  
标识中间的数字为环保使用期限的年数。



**YAMAHA**  
**合格证**

检验员：\_\_\_\_\_

检验日期：\_\_\_\_\_

本产品标准编号：\_\_\_\_\_



For details of products, please contact your nearest Yamaha representative or the authorized distributor listed below.

Pour plus de détails sur les produits, veuillez-vous adresser à Yamaha ou au distributeur le plus proche de vous figurant dans la liste suivante.

Die Einzelheiten zu Produkten sind bei Ihren unten aufgeführten Niederlassung und bei Yamaha Vertragshändlern in den jeweiligen Bestimmungsländern erhältlich.

Para detalles sobre productos, contacte su tienda Yamaha más cercana o el distribuidor autorizado que se lista debajo.

## NORTH AMERICA

### CANADA

#### Yamaha Canada Music Ltd.

135 Milner Avenue, Toronto, Ontario,  
M1S 3R1, Canada  
Tel: 416-298-1311

### U.S.A.

#### Yamaha Corporation of America

6600 Orangethorpe Avenue, Buena  
Park, CA 90620, U.S.A.  
Tel: 714-522-9011

## CENTRAL & SOUTH AMERICA

### MEXICO

#### Yamaha de México, S.A. de C.V.

Av. Insurgentes Sur 1647 Piso 9, Col.  
San José Insurgentes, Delegación  
Benito Juárez, México, D.F., C.P. 03900  
Tel: 55-5804-0600

### BRAZIL

#### Yamaha Musical do Brasil Ltda.

Rua Joaquim Floriano, 913 - 4º andar,  
Itaim Bibi, CEP 04534-013 São Paulo,  
SP. BRAZIL  
Tel: 011-3704-1377

### ARGENTINA

#### Yamaha Music Latin America, S.A., Sucursal Argentina

Olga Cossetini 1553, Piso 4 Norte,  
Madero Este-C1107CEK  
Buenos Aires, Argentina  
Tel: 011-4119-7000

### VENEZUELA

#### Yamaha Music Latin America, S.A., Sucursal Venezuela

C.C. Manzanares Plaza P4  
Ofic. 0401- Manzanares-Baruta  
Caracas Venezuela  
Tel: 58-212-943-1877

### PANAMA AND OTHER LATIN AMERICAN COUNTRIES/ CARIBBEAN COUNTRIES

#### Yamaha Music Latin America, S.A.

Torre Banco General, Piso No.7,  
Marbella, Calle 47 y Aquilino de la  
Guardia, Ciudad de Panamá,  
República de Panamá  
Tel: +507-269-5311

## EUROPE

### THE UNITED KINGDOM/IRELAND

#### Yamaha Music Europe GmbH (UK)

Sherbourne Drive, Tilbrook, Milton  
Keynes, MK7 8BL, U.K.  
Tel: 01908-366700

### GERMANY

#### Yamaha Music Europe GmbH

Siemensstraße 22-34, 25462 Rellingen,  
Germany  
Tel: 04101-3030

### SWITZERLAND/LIECHTENSTEIN

#### Yamaha Music Europe GmbH

Branch Switzerland in Zürich  
Seefeldstrasse 94, 8008 Zürich,  
Switzerland  
Tel: 044-387-8080

### AUSTRIA/BULGARIA

#### Yamaha Music Europe GmbH

Branch Austria  
Schleiergasse 20, A-1100 Wien, Austria  
Tel: 01-60203900

### CZECH REPUBLIC/HUNGARY/ ROMANIA/SLOVAKIA/SLOVENIA

#### Yamaha Music Europe GmbH

Branch Austria  
(Central Eastern Europe Office)  
Schleiergasse 20, A-1100 Wien, Austria  
Tel: 01-60203900

### POLAND/LITHUANIA/LATVIA/ ESTONIA

#### Yamaha Music Europe GmbH

#### Branch Poland Office

ul. Wrotkowa 14 02-553 Warsaw, Poland  
Tel: 022-500-2925

### MALTA

#### Olimpus Music Ltd.

The Emporium, Level 3, St. Louis  
Street Msida MSD06  
Tel: 02133-2144

### NETHERLANDS/BELGIUM/

### LUXEMBOURG

#### Yamaha Music Europe Branch

#### Benelux

Clarissenhof 5-b, 4133 AB Vianen,  
Netherlands  
Tel: 0347-358 040

### FRANCE

#### Yamaha Music Europe

7 rue Ambroise Croizat,  
Zone d'activités Pariest,  
77183 Croissy-Beaubourg, France  
Tel: 01-64-61-4000

### ITALY

#### Yamaha Music Europe GmbH,

#### Branch Italy

Viale Italia 88, 20020 Lainate (Milano),  
Italy  
Tel: 02-935-771

### SPAIN/PORTUGAL

#### Yamaha Music Europe GmbH

#### Ibérica, Sucursal en España

Ctra. de la Coruna km. 17,200, 28231  
Las Rozas (Madrid), Spain  
Tel: +34-91-639-88-88

### GREECE

#### Philippos Nakas S.A. The Music

#### House

147 Skiathou Street, 112-55 Athens,  
Greece  
Tel: 01-228 2160

**SWEDEN/FINLAND/ICELAND****Yamaha Music Europe GmbH  
Germany filial  
Scandinavia**

J. A. Wettergrensgata 1, Box 30053  
S-400 43 Göteborg, Sweden  
Tel: +46 31 89 34 00

**DENMARK****Yamaha Music Europe GmbH,  
Tyskland – filial  
Denmark**

Generatørvej 6A, DK-2730 Herlev,  
Denmark  
Tel: 44 92 49 00

**NORWAY****Yamaha Music Europe GmbH  
Germany - Norwegian Branch**

Grini Næringspark 1, N-1361 Østerås,  
Norway  
Tel: 67 16 78 00

**RUSSIA****Yamaha Music (Russia) LLC.**

Room 37, bld. 7, Kievskaya street,  
Moscow, 121059, Russia  
Tel: 495 626 5005

**OTHER EUROPEAN COUNTRIES****Yamaha Music Europe GmbH**

Siemensstraße 22-34, 25462 Rellingen,  
Germany  
Tel: +49-4101-3030

**AFRICA****Yamaha Music Gulf FZE**

Office JAFZA 16-512, P.O.Box 17328,  
Jebel Ali - Dubai, UAE  
Tel: +971-4-881-5868

**MIDDLE EAST****TURKEY****Yamaha Music Europe GmbH  
Merkezi Almanya Türkiye İstanbul  
Şubesi**

Maslak Meydan Sokak No:5 Spring Giz  
Plaza  
Bağimsız Böl. No:3, 34398 Şişli İstanbul  
Tel: +90-212-999-8010

**CYPRUS**

**Yamaha Music Europe GmbH**  
Siemensstraße 22-34, 25462 Rellingen,  
Germany  
Tel: 04101-3030

**OTHER COUNTRIES****Yamaha Music Gulf FZE**

Office JAFZA 16-512, P.O.Box 17328,  
Jebel Ali - Dubai, U.A.E  
Tel: +971-4-881-5868

**ASIA****THE PEOPLE'S REPUBLIC OF  
CHINA**

**Yamaha Music & Electronics (China)  
Co.,Ltd.**  
2F, Yunhedasha, 1818 Xinzha-lu,  
Jingan-qu, Shanghai, China  
Tel: 021-6247-2211

**INDIA****Yamaha Music India Pvt. Ltd.**

Spazedge building, Ground Floor,  
Tower A, Sector 47, Gurgaon- Sohna  
Road, Gurgaon, Haryana, India  
Tel: 0124-485-3300

**INDONESIA****PT. Yamaha Musik Indonesia  
(Distributor)**

Yamaha Music Center Bldg. Jalan Jend.  
Gatot Subroto Kav. 4, Jakarta 12930,  
Indonesia  
Tel: 021-520-2577

**KOREA****Yamaha Music Korea Ltd.**

8F, 9F, Dongsung Bldg. 158-9  
Samsung-Dong, Kangnam-Gu, Seoul,  
Korea  
Tel: 02-3467-3300

**MALAYSIA****Yamaha Music (Malaysia) Sdn., Bhd.**

No.8, Jalan Perbandaran, Kelana Jaya,  
47301  
Petaling Jaya, Selangor, Malaysia  
Tel: 03-78030900

**SINGAPORE**

**Yamaha Music (Asia) Private Limited**  
Block 202 Hougang Street 21, #02-00,  
Singapore 530202, Singapore  
Tel: 65-6747-4374

**TAIWAN****Yamaha Music & Electronics Taiwan  
Co.,Ltd.**

3F, No.6, Section 2 Nan-Jing East Road,  
Taipei, Taiwan R.O.C.  
Tel: 02-2511-8688

**THAILAND****Siam Music Yamaha Co., Ltd.**

3, 4, 15 and 16th floor, Siam Motors  
Building, 891/1 Rama 1 Road,  
Wangmai, Pathumwan, Bangkok  
10330, Thailand  
Tel: 02-215-2622

**VIETNAM****Yamaha Music Vietnam Company  
Limited**

15th Floor, Nam A Bank Tower, 201-  
203 Cach Mang Thang Tam St., Ward 4,  
Dist.3, Ho Chi Minh City, Vietnam  
Tel: +84-8-3818-1122

**OTHER ASIAN COUNTRIES****Yamaha Corporation****Sales & Marketing Division**

Nakazawa-cho 10-1, Naka-ku,  
Hamamatsu, Japan 430-8650  
Tel: +81-53-460-2312

**OCEANIA****AUSTRALIA****Yamaha Music Australia Pty. Ltd.**

Level 1, 99 Queensbridge Street,  
Southbank,  
Victoria 3006, Australia  
Tel: 3-9693-5111

**COUNTRIES AND TRUST  
TERRITORIES IN PACIFIC OCEAN****Yamaha Corporation****Sales & Marketing Division**

Nakazawa-cho 10-1, Naka-ku,  
Hamamatsu, Japan 430-8650  
Tel: +81-53-460-2312

**HEAD OFFICE**

**Yamaha Corporation, Audio Products Sales and Marketing Division**  
Nakazawa-cho 10-1, Naka-ku, Hamamatsu, Japan 430-8650



Yamaha Pro Audio global web site:  
<http://www.yamahaproaudio.com/>  
Yamaha Manual Library  
<http://www.yamaha.co.jp/manual/>

C.S.G., PA Development Division  
© 2013-2014 Yamaha Corporation

Published 04/2014 IP-C0

VQT4V69-3